




Volvo FH 2020-

Art. 868569


Rammraua montaažikomplekt | Truck cattelguard, mounting kit | Передняя дуга, монтажный комплект | LKW Bullfänger, Montagesatz



- | | |
|---|---|
| 1. Kronstein / bracket / кронштейн / Konsole | 1 |
| 2. Kronstein / bracket / кронштейн / Konsole | 1 |
| 3. Kronstein / bracket / кронштейн / Konsole | 1 |
| 4. Kronstein / bracket / кронштейн / Konsole | 1 |
| 5. Polt / bolt / болт / Bolzen M16x80 | 2 |
| 6. Polt / bolt / болт / Bolzen M12x30 | 4 |
| 7. Mutter / nut / гайка / Mutter M12 | 4 |
| 8. Seib / flat washer / шайба / Scheibe 13x24x2,5 | 8 |
| 9. Seib / flat washer / шайба / Scheibe d= 8 mm DIN9021 | 6 |

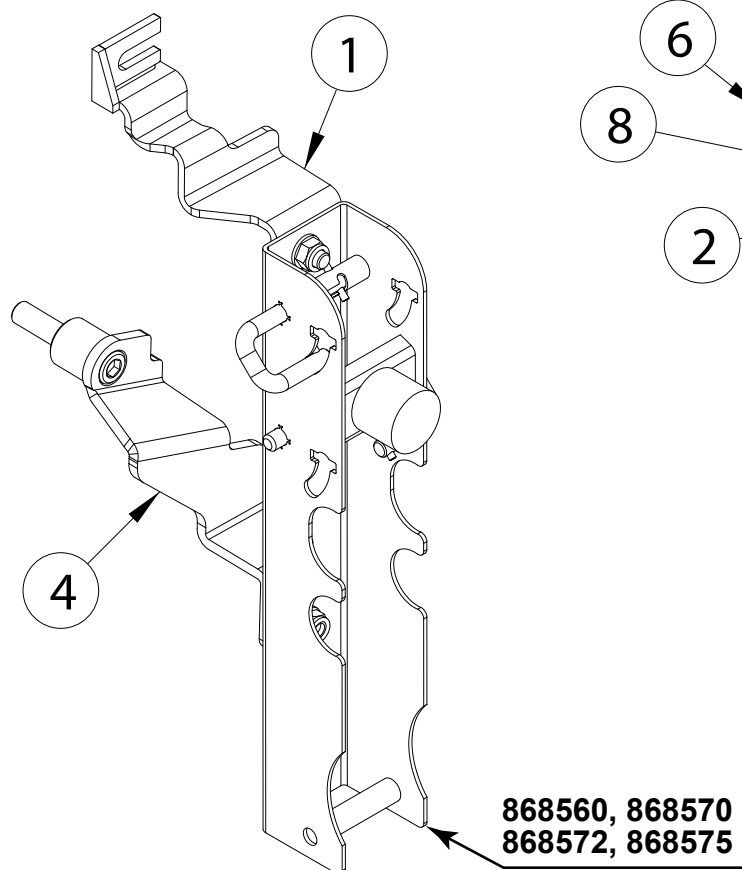

868560, 868570
868572, 868575

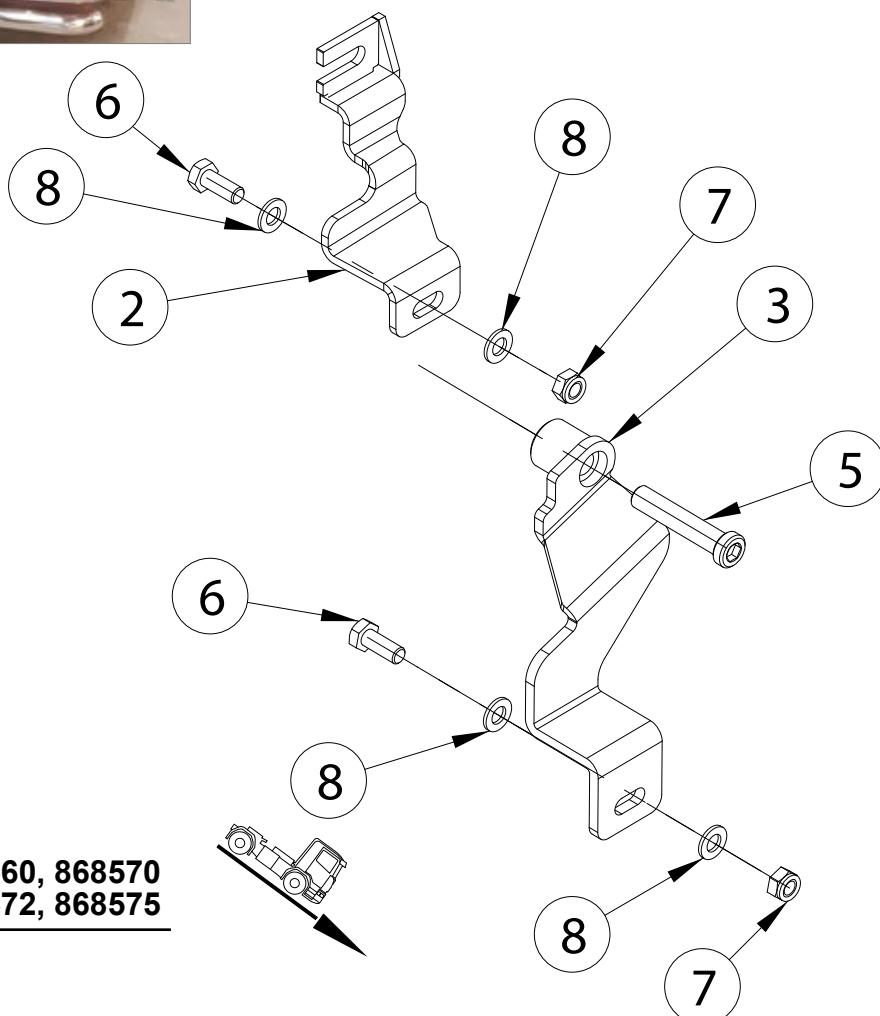

Kaal / Weight / Масса / Gewicht: 5 kg







Paigaldusaeg ilma elektritöödeta / Time of mounting w/o wiring works / Время установки без электромонт. работ / Einbauzeit ohne elektrische arbeit: 60 min





Vajalikud tööriistad / Required Tools / Необходимые инструменты / Benötigte Werkzeuge



M12 - 90 Nm
M16 - 160 Nm



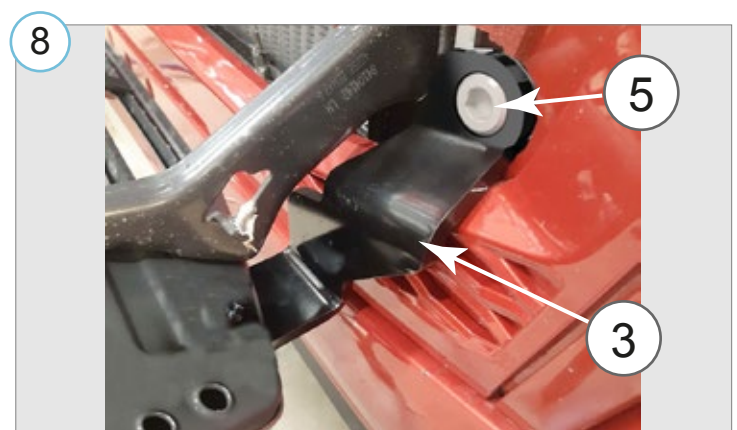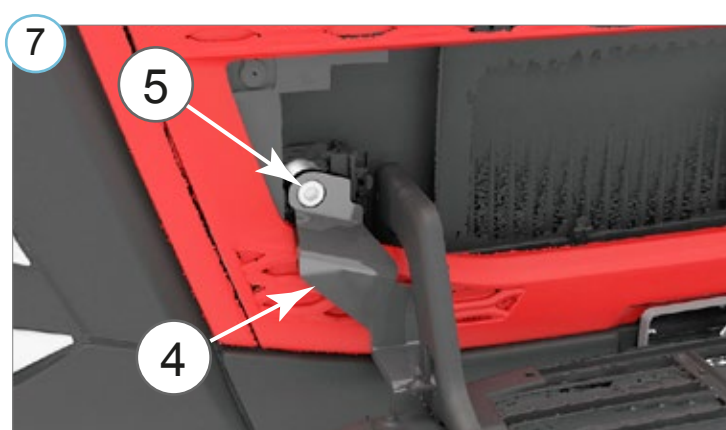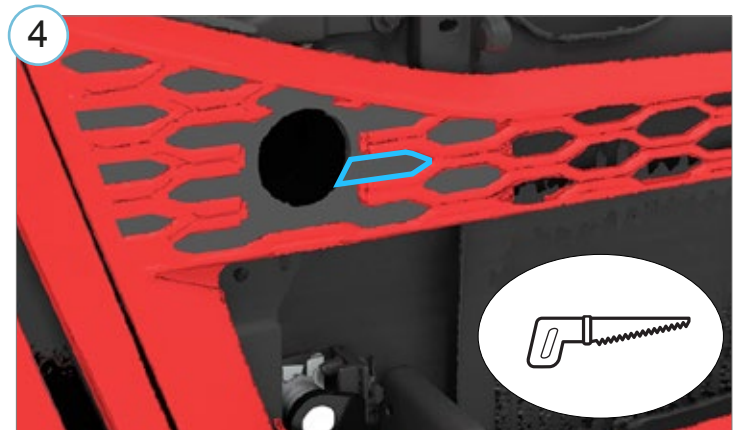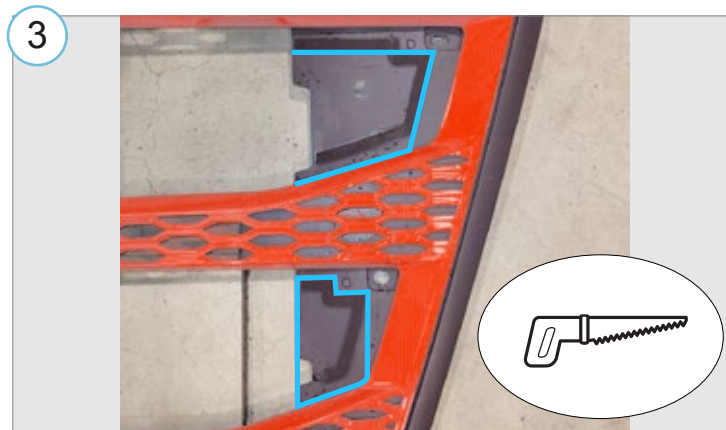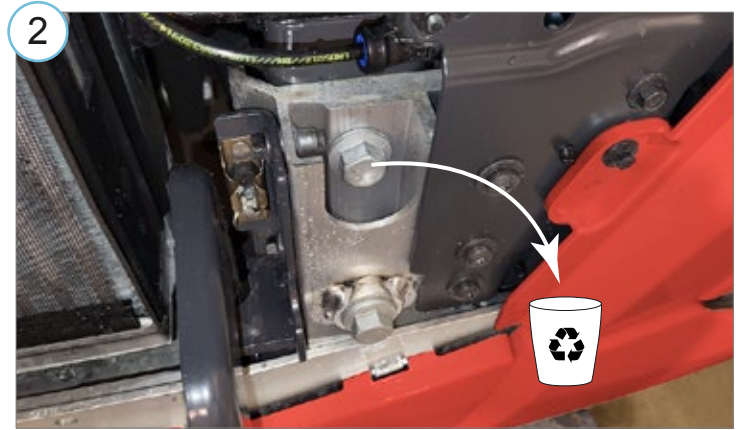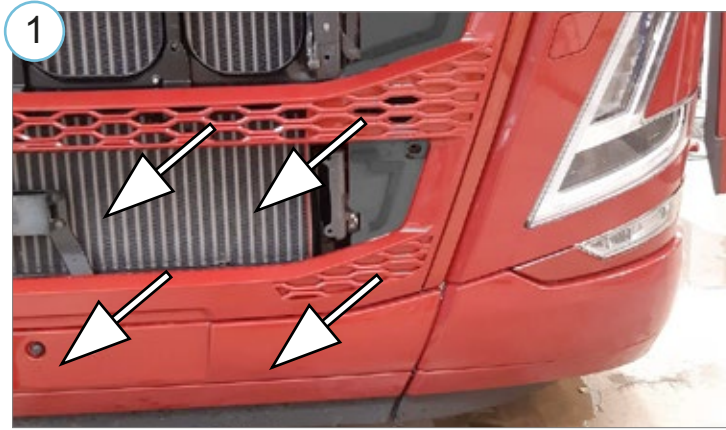

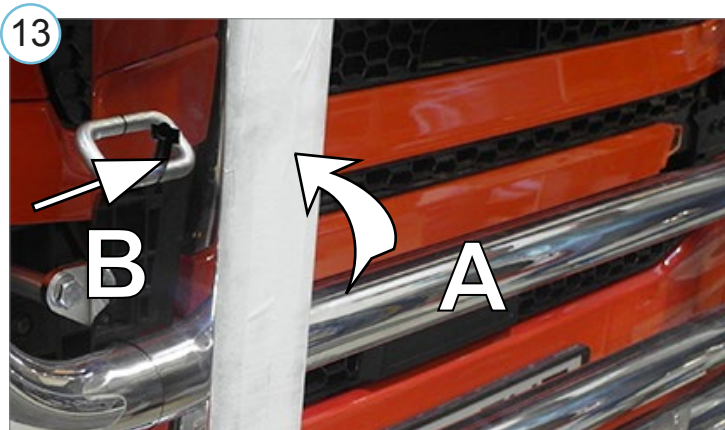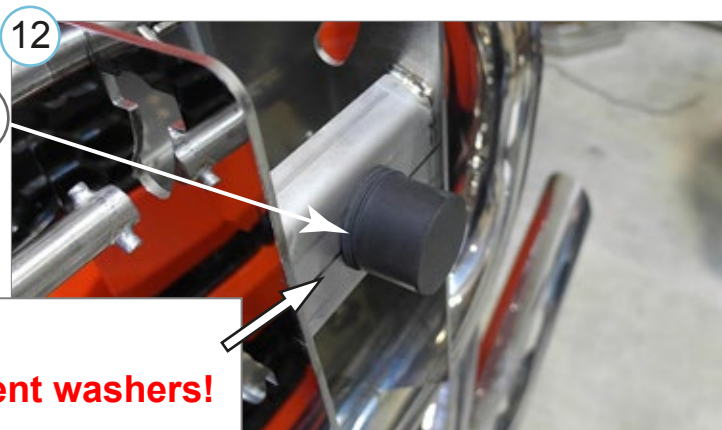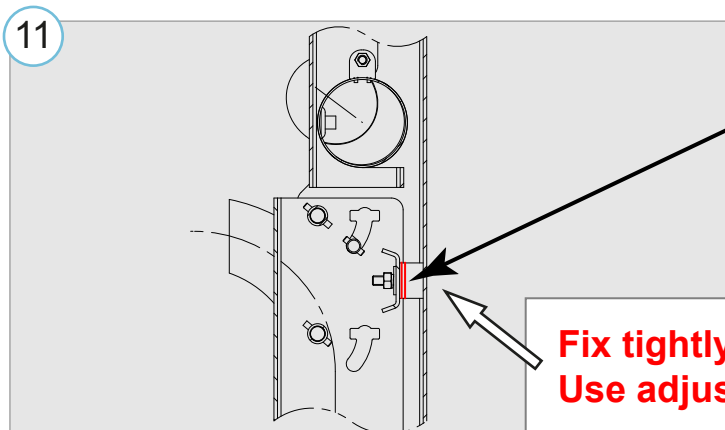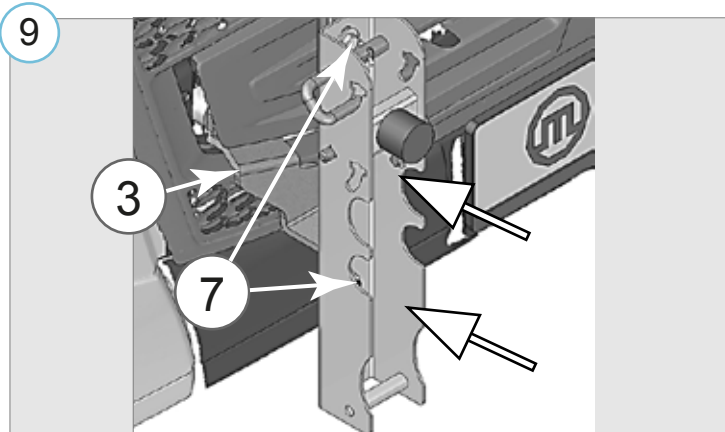

14

Elektriühendused teostada kvalifitseeritud autoelektriku poolt

Installation of the lights can be carried out by qualified electrician only

Монтаж огней может быть выполнено только квалифицированным электриком

Die Installation der Lichter können durchgeführt werden durch Elektrofachkraft

15

Külmkeevituse vältimiseks kasutada külmkeevitusvastast määret või mootoriõli.

To prevent cold welding, use cold weld grease or engine oil.

Verwenden Sie geeignetes Fett oder Motoröl, um die Kaltverschweißung zu verhindern.

Для предотвращения холодной сварки используйте смазку от холодной сварки или моторное масло.

16

NB!

10 000 km

2x

1	2	3	4	5	6	7
8	9	10	11	12	13	14
15	16	17	18	19	20	21
22	23	24	25	26	27	28
29	30	31	32	33	34	35