




VW Caddy 2021-

Art. 840042

Nordicbar | Nordicbar | Нордикбар | Nordicbar



1. Nordicbar / Nordicbar / Нордикбар / Nordicbar	1
2. Kronstein / bracket / кронштейн / Konsole	1
3. Kronstein / bracket / кронштейн / Konsole	1
4. T-polt / T-bolt / T-болт / T-bolzen	2
5. Kronstein / bracket / кронштейн / Konsole	4
6. Kronstein / bracket / кронштейн / Konsole	1
7. Kronstein / bracket / кронштейн / Konsole	1
8. Kronstein / bracket / кронштейн / Konsole	1
9. Kronstein / bracket / кронштейн / Konsole	4
10. Seib / flat washer / шайба / Scheibe	2
11. Kronstein / bracket / кронштейн / Konsole	1
12. Kronstein / bracket / кронштейн / Konsole	1
13. Latt / rod steel / полосовая сталь / Stabstahl	2
14. Laternaalus / lamp fixing bracket / крепежный кронштейн лампы / Lampenbefestigungsklammer	3
15. Polt / bolt / болт / Bolzen M10x25	6
16. Polt / bolt / болт / Bolzen M8x25 DIN7380-A2	3
17. Polt / bolt / болт / Bolzen M8x25 DIN933-A2	4
18. Polt / bolt / болт / Bolzen M8x20	14
19. Mutter / nut / гайка / Mutter M10 DIN985-galZn	4
20. Mutter / nut / гайка / Mutter M8	10
21. Mutter / nut / гайка / Mutter M10 DIN934-galZn	2
22. Seib / flat washer / шайба / Scheibe 10,5x30x2,5	12
23. Seib / flat washer / шайба / Scheibe 8,4x24x2	20
24. Vedruseib / spring washer / пружинная шайба / Federnscheibe A10	4
25. Vedruseib / spring washer / пружинная шайба / Federnscheibe A8	11

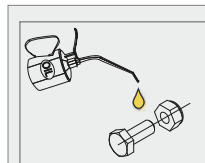

Külmkeevituse vältimiseks kasutada külmkeevitusvastast määret või mootoriõli.

To prevent cold welding, use cold weld grease or engine oil.

Verwenden Sie geeignetes Fett oder Motoröl, um die Kaltverschweißung zu verhindern.

Для предотвращения холодной сварки используйте смазку от холодной сварки или моторное масло.

Kaal / Weight / Масса / Gewicht: 15,1 kg








Paigaldusaeg ilma elektritöödeta / Time of mounting w/o wiring works / Время установки без электромонт. работ /







Einbauzeit ohne elektrische arbeit: 120 min




Vajalikud tööriistad / Required Tools / Необходимые инструменты / Benötigte Werkzeuge



M8 - 25 Nm
M10 - 50 Nm

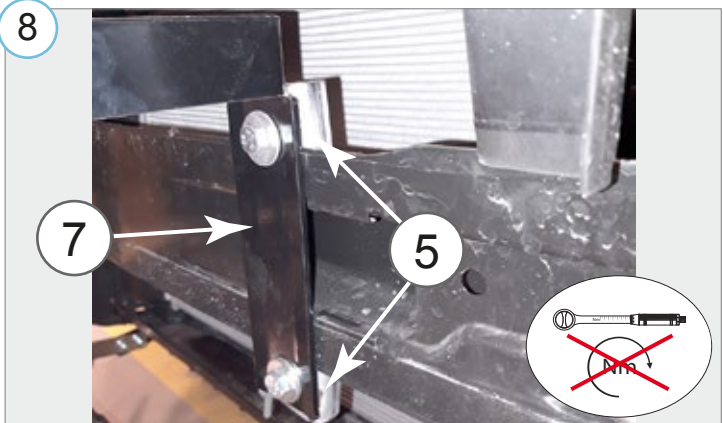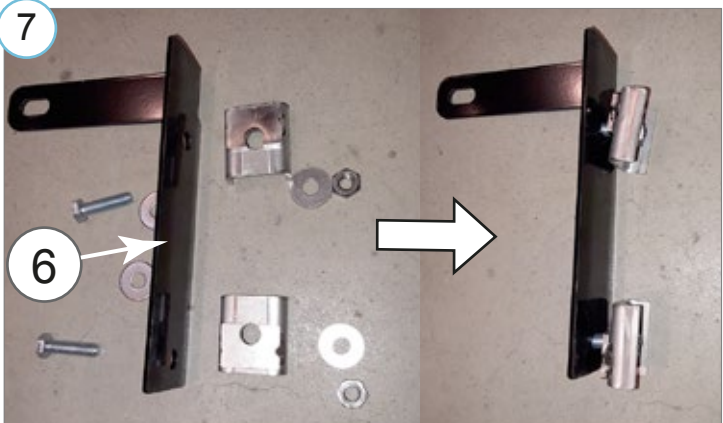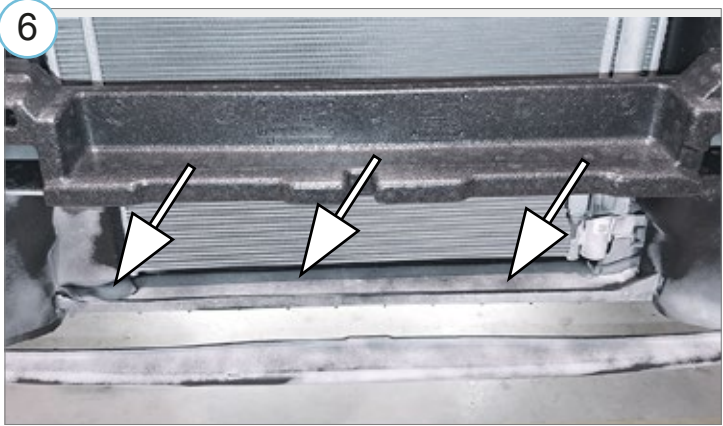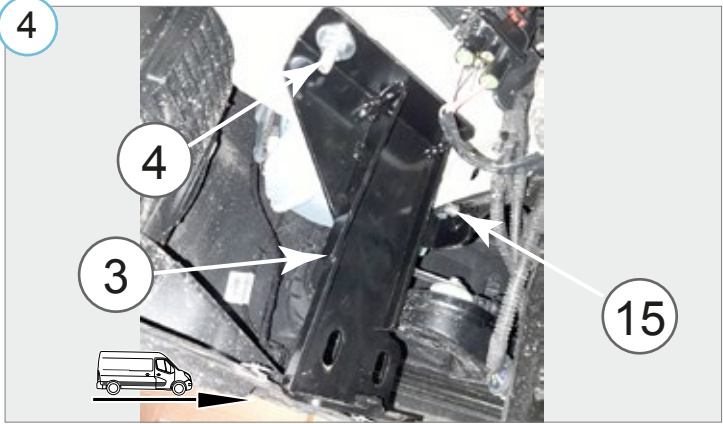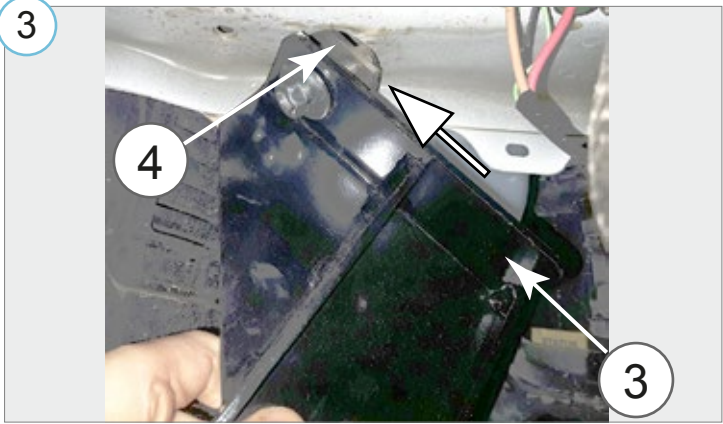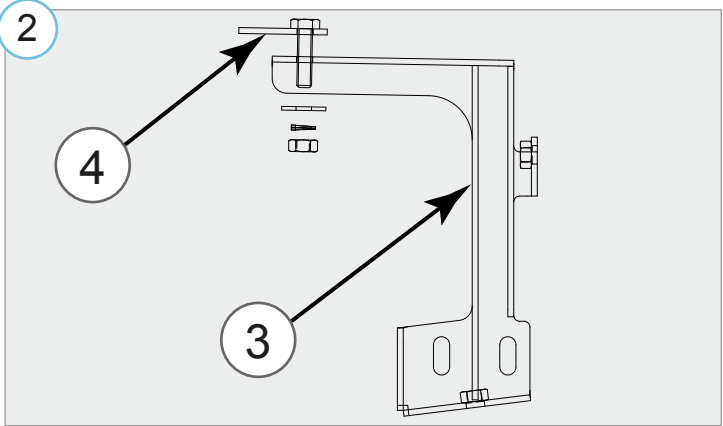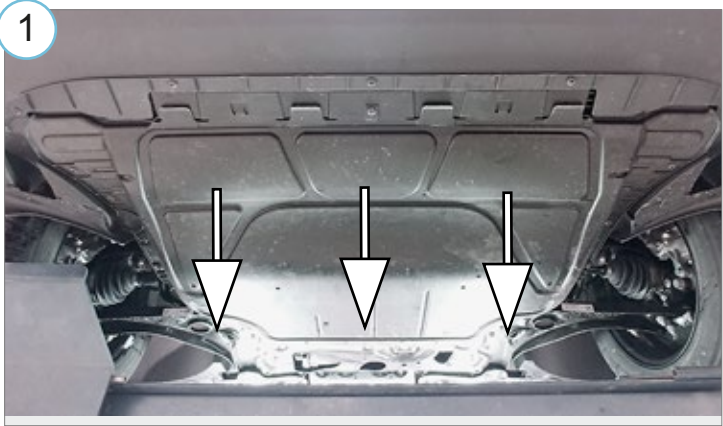

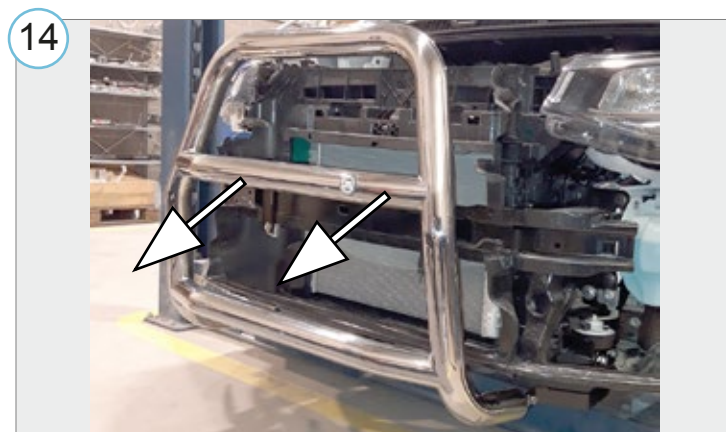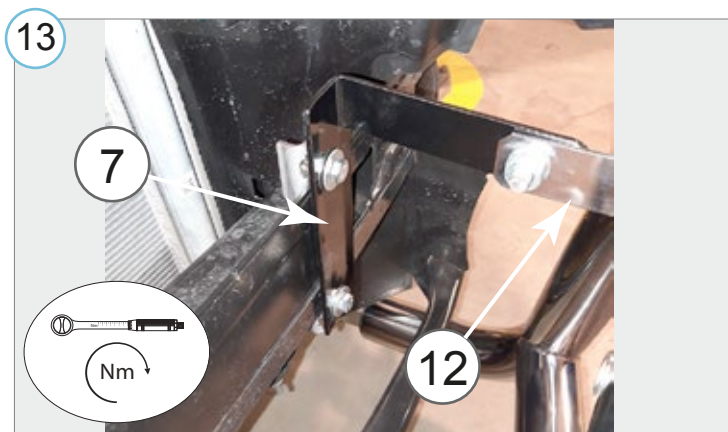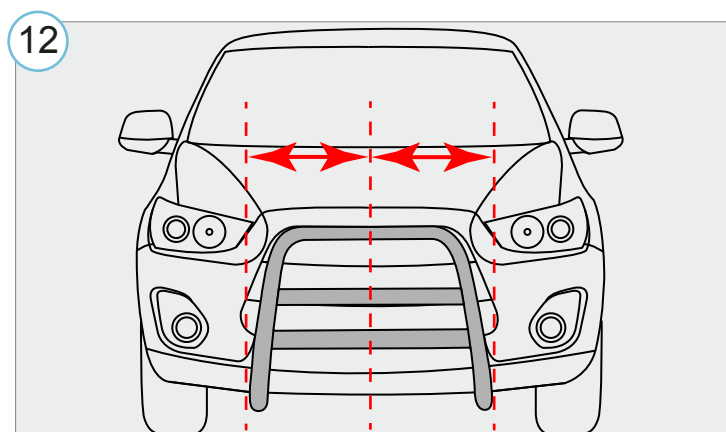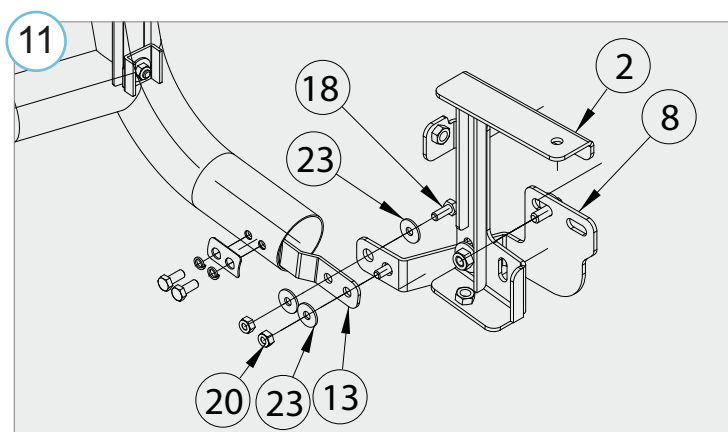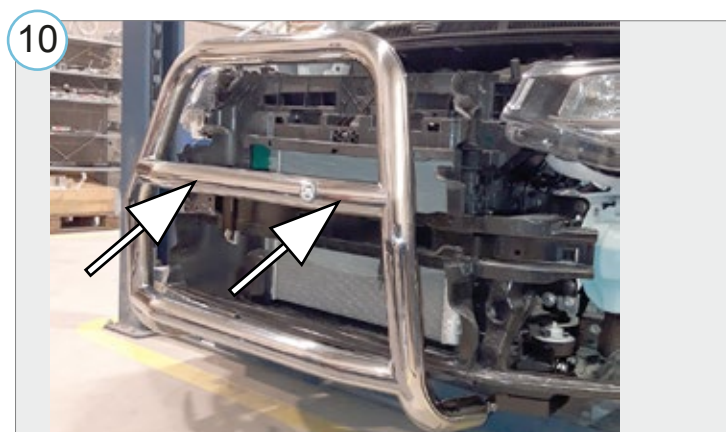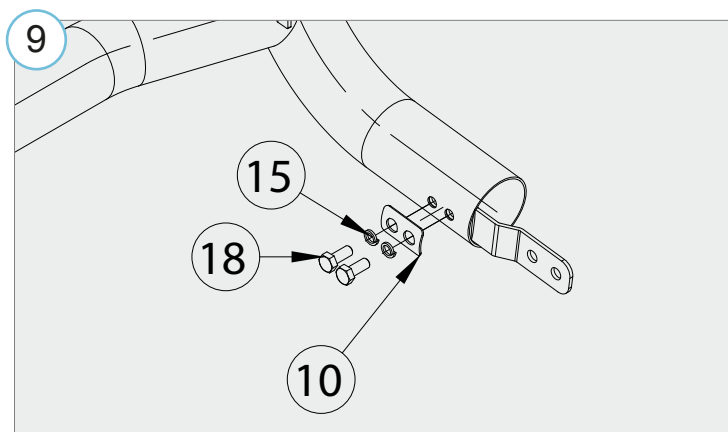

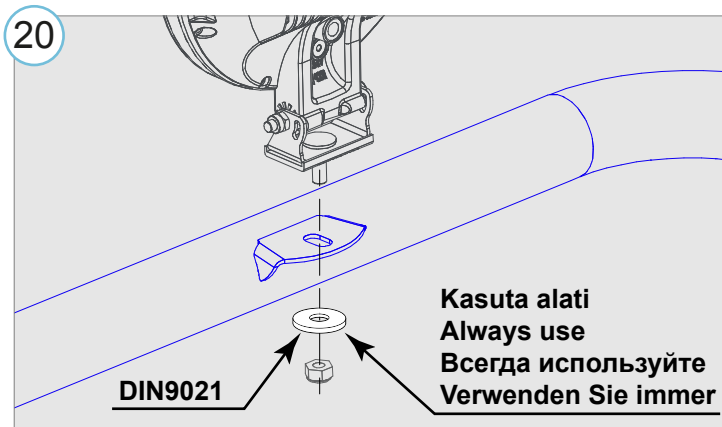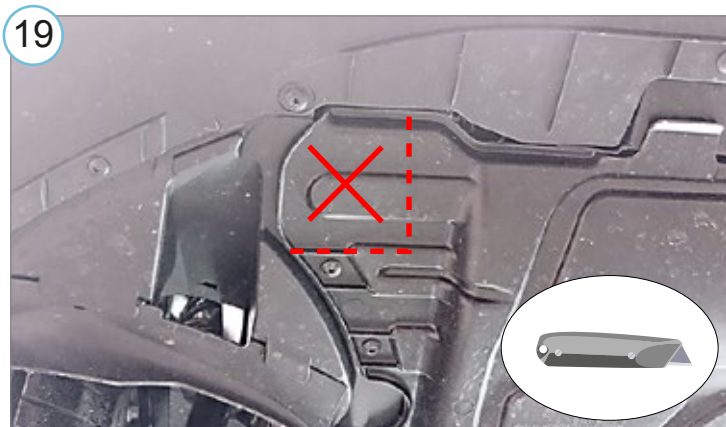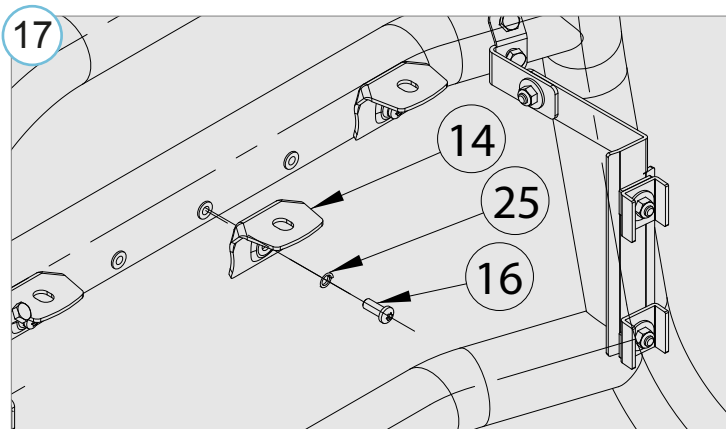

21

Elektriühendused teostada kvalifitseeritud autoelektriku poolt

Installation of the lights can be carried out by qualified electrician only

Монтаж огней может быть выполнено только квалифицированным электриком

Die Installation der Lichter können durchgeführt werden durch Elektrofachkraft

22 **ALATES / FROM / OT / VON 01.02.2022**


Lisalaternate paigaldise lubatud maksimaalne kogukaal

Allowed maximum weight of the installation of the extra lights in total is

Максимально допустимая общая масса установки дополнительных фар

Zulässiges Maximalgewicht der Installation der zusätzlichen Lichter insgesamt ist

8 kg

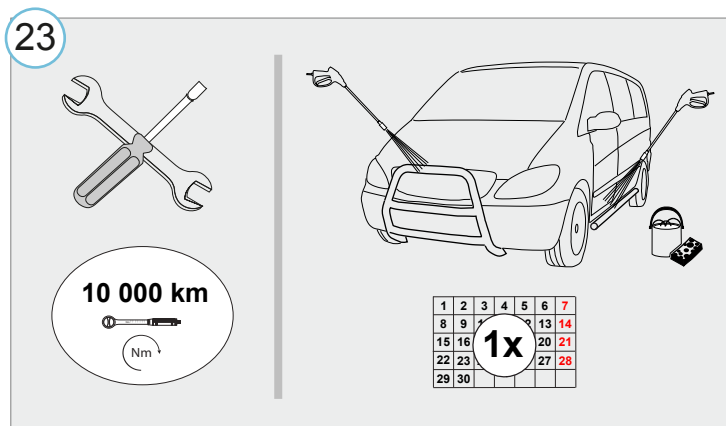

Lisa /extra / приложение / Extra

