




VW T6.1 2019-


Art. 840408

Laternakandur | Lamp holder | Носител фар | Scheinwerferbügel

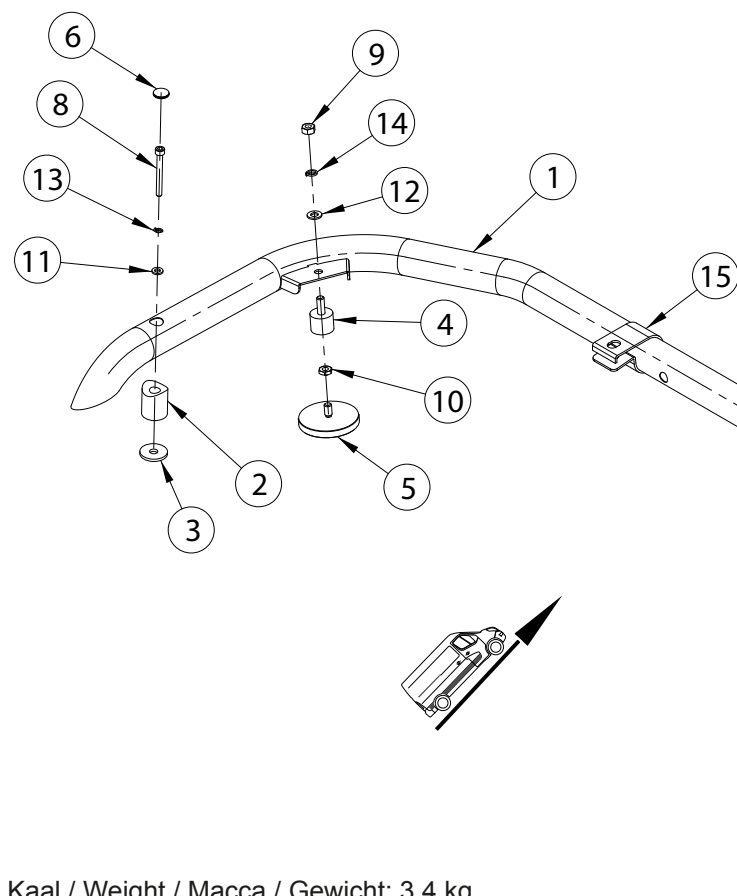

- | | |
|---|---|
| 1. Laternakandur / lamp holder / носител фар / Scheinwerferbügel | 1 |
| 2. Puks / bushing / втулка / Buchse | 2 |
| 3. Kummiseib / rubber washer / резиновая шайба / Gummisscheibe | 2 |
| 4. Kompensaator / compensator / компенсатор / Kompensator 25x20 | 2 |
| 5. Magnetkinnitus / magnetic fastening / магнитное крепление / Magnetbefestigung d=66 M8x15 | 2 |
| 6. Kummikork / rubber stopper / резиновая пробка / Gummistopfen 15 mm | 2 |
| 7. Läviviik / grommet / проходная подкладка / Tülle | 1 |
| 8. Polt / bolt / болт / Bolzen M6x55 | 2 |
| 9. Mutter / nut / гайка / Mutter M8 DIN934-A2 | 2 |
| 10. Mutter / nut / гайка / Mutter M8 DIN439-A2 | 2 |
| 11. Seib / flat washer / шайба / Scheibe 6,4x12x1,6 | 2 |
| 12. Seib / flat washer / шайба / Scheibe 8,4x16x1,6 | 2 |
| 13. Vedruseib / spring washer / пружинная шайба / Federnscheibe A6 | 2 |
| 14. Vedruseib / spring washer / пружинная шайба / Federnscheibe A8 | 2 |
| 15. Laternaklammer / clamp for lamp / зажим для лампы / Schelle | 2 |

M6 - 11 Nm
M8 - 25 Nm





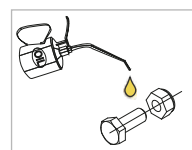


Kaal / Weight / Масса / Gewicht: 3,4 kg

Paigaldusaeg ilma elektritöödet / Time of mounting w/o wiring works / Время установки без электромонт. работ / Einbauzeit ohne elektrische arbeit: 30 min

Vajalikud tööriistad / Required Tools / Необходимые инструменты / Benötigte Werkzeuge




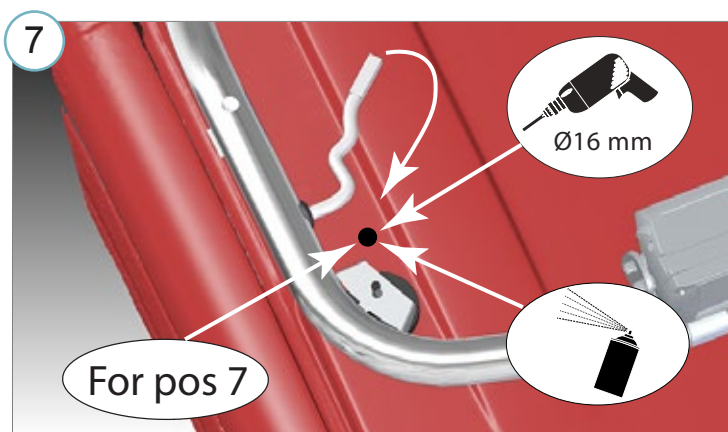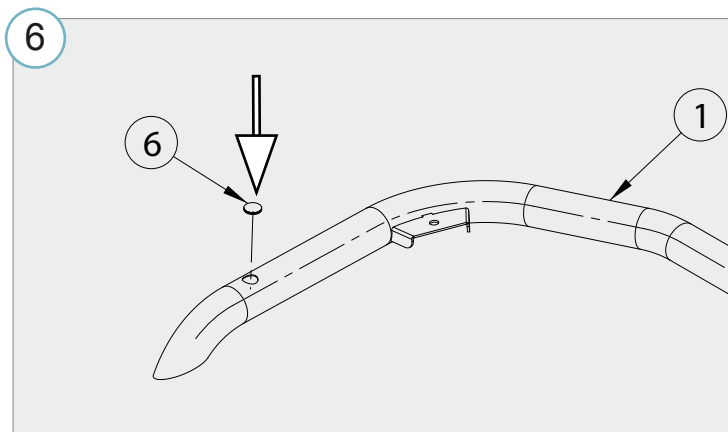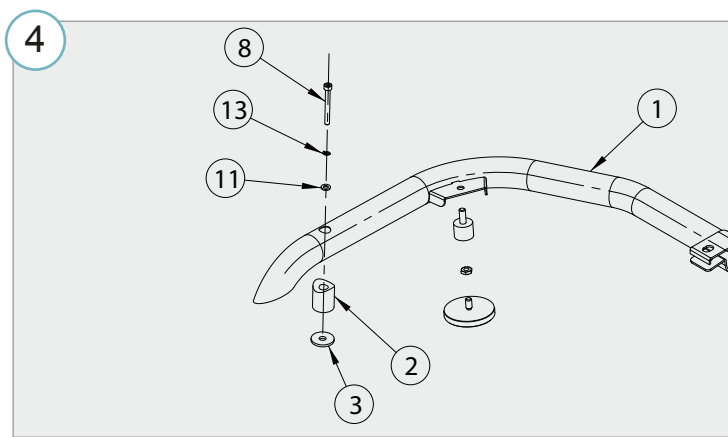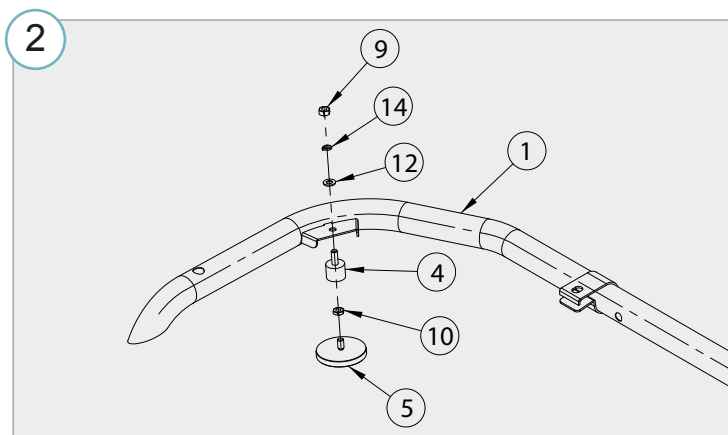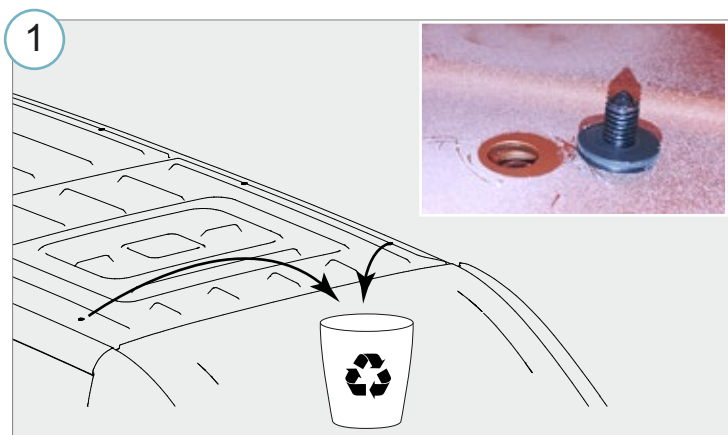

9



10

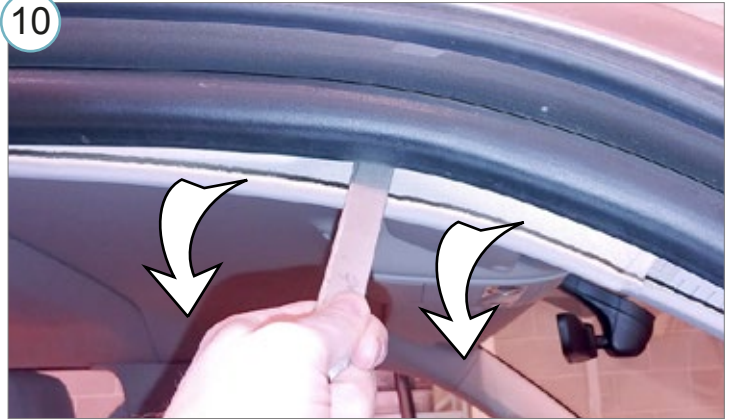

11

